

betron

A3 BLUETOOTH SPEAKER

 


USER MANUAL


INDEX

Index	2
What is in the box	3
Features	4
Charging	5
Product Schematic	6
Control Butons	7
Bluetooth Pairing	8
Additional Bluetooth Information	9
Cable Connection	10
Care and Maintenance	11
Support	12
Trouble Shooting	13

Unpacking

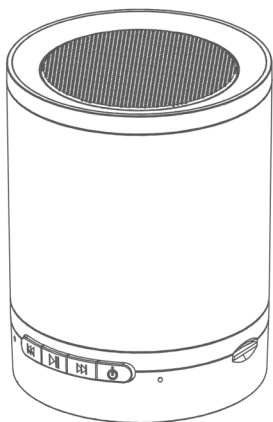


Betron A3 Speaker

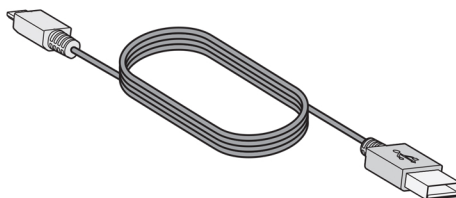 

USB Charging Lead



 User Manual

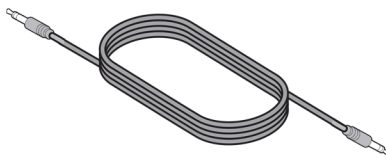

Audio Cable

Features

Betron A3 is a wireless Bluetooth speaker which is designed for maximum portability. The speaker is super light and the 500mAh built in high capacity battery makes the play time up to 3.5 hours.

High quality drivers combined with Bluetooth V4.2+EDR provides crisp stereo sound and frequency responses is beyond the size of speaker.

Placement guidelines

- For best Bluetooth performance place your mobile device within 30 ft. (9 m) of your speaker, and make sure there is a clear line of sight between you and your speaker.

Moving your mobile device further away, or not having a clear line of sight, may impact sound quality, and your mobile device may disconnect from your speaker.

- For optimal performance, place the back of your speaker near, but not directly against a wall. Bass response decreases as you move your speaker away from a wall.
- Keep other wireless equipment at least 3 ft. (1 m) away from your speaker.
- Place your speaker and your mobile device outside of and away from metal cabinets, other audio/video components and direct heat sources.

 
CAUTION: Stand your speaker on its base. Standing your speaker on any other side may cause damage to your speaker and affect sound quality.

Charging

Your speaker ships with a partial charge. Before using your speaker for the first time, connect it to a USB wall charger (not included) or computer that is powered on. Your speaker does not need to be fully charged, but it does require the initial connection to activate the battery.

Note: Use a 1000 mA power source for the best speaker charging experience. Using a power source with less than 1000 mA may result in a slower charging time or your speaker may not be able to charge while playing audio.

1. Plug the small end of the USB charging cable into the micro-B USB connector on your speaker.

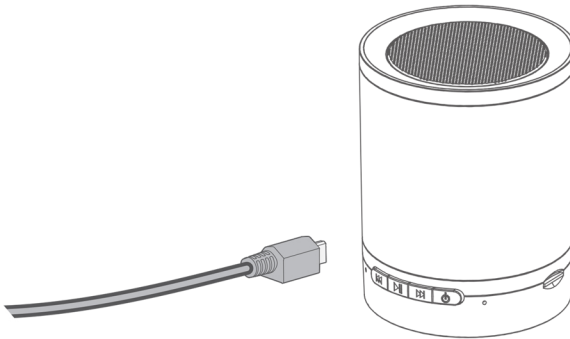

2. Plug the other end into a USB wall charger or computer that is powered on. The battery indicator blinks amber, and your speaker emits a tone. When fully charged, the battery indicator glows green.

Powering on your speaker

 
 
On the button pad, press the Power button .

- The first time the speaker is powered on, the Bluetooth® indicator blinks blue, and you hear a voice.
- When the speaker has been powered on previously and at least one mobile device has been paired, the Bluetooth® indicator blinks white and the speaker connects to the last two mobile devices.

Control Buttons

The button pad enables you to power on your speaker and control your speaker's playback, volume and speakerphone.

Note: Certain mobile devices may not support these functions.

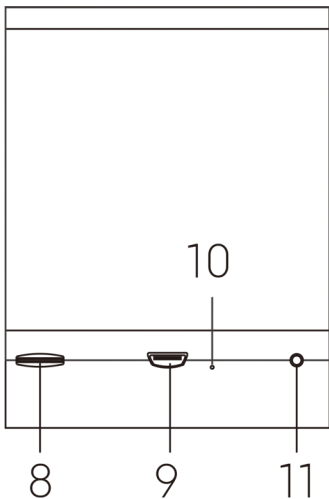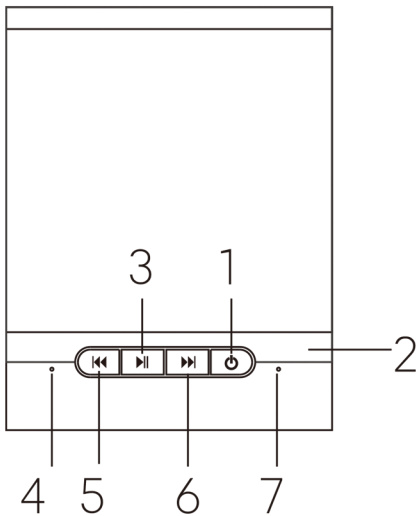

1. Power On/Off
2. Background Light
3. Play/Pause - Answer/Hang Up Call
4. Microphone
5. Volume Down/ Previous Track
6. Volume Up / Next Track
7. Status Indicator
8. SD Card Slot
9. Micro USB Charging Port
10. Power Indicator
11. Reset

Using the Multi-function button

This button controls music sources and speakerphone calls on your mobile device from your speaker.

Playback controls

Play	Press MFB
Pause	Press MFB
Skip forward to the next track	Press MFB Twice
Skip backward to the previous track	Press MFB Three Times

Speakerphone controls

Make a call	Press and hold the MFB to access voice control on your mobile device.
Switch a call from speakerphone to your mobile device, while on a call	Press and hold MFB
Answer a call	Press MFB
Reject a call	Press and hold MFB
End a call	Press MFB
Switch between calls	While on a call, press the MFB to answer a second call. Press twice to switch between the calls.

Pairing Your Mobile Device

When you power your speaker on for the first time, the speaker automatically searches

1. On your mobile device, turn on the Bluetooth® feature.
Tip: The Bluetooth feature is usually found in the Settings menu.
2. Select your Betron A3 speaker (which will appear as A3 on the screen) from the device list.



Once paired, you hear "Connected to <mobile device name>," and the Bluetooth indicator glows solid white.

Pairing Another Mobile Device

You can store multiple paired mobile devices in the speaker pairing list.

NOTE:

This speaker can connect one audio source at a time. In order to use your speaker with another audio source please make sure the Bluetooth function of the first audio source is switched off. Otherwise you will not be able to see the speaker on Bluetooth devices list on another device.

Disconnecting a Mobile Device

- Turn off the Bluetooth feature on your mobile device.

Disconnecting a Mobile Device

When powered on, your speaker tries to reconnect with the two most recently connected mobile devices.

NOTE: The mobile devices must be within range and powered on.

 
You can store multiple paired mobile devices in the speaker pairing list and your speaker can be actively connected to one mobile device at a time.

You can only play audio from one mobile device at a time.

Using a cable to connect a mobile device


The AUX connector accepts a 3.5 mm stereo cable plug (provided).

1. Using a 3.5 mm stereo cable, connect your mobile device to the AUX connector on your speaker.

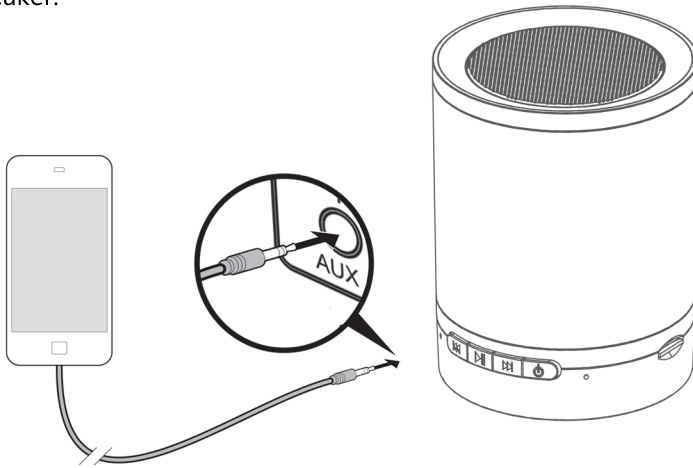

2. Turn on the speaker. It will automatically switch to the AUX mode.
3. Alternatively, you can short press the power button to change the mode manually.

 Playing Music From Card Reader

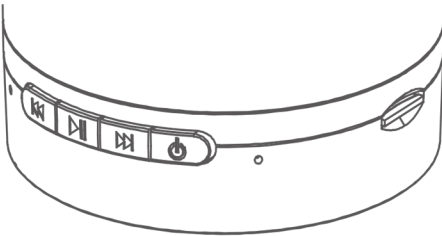

Betron A3 have a built-in music player with a card reader. You can transfer your music to a memory card and play them on the Betron speaker. After you inserted the memory card in the speaker, please change the mode to the music player.

The built-in music player can only access to the root folder of the memory card. Any songs in subfolders cannot be played. Please also note that, if there are special characters in the song name, the player may not be able to read the music file.

Care and Maintenance

Cleaning

- Clean the surface of the speaker with a soft, damp cloth (water only).
- Do not use any sprays near the speaker. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia or abrasives.
- Do not allow liquids to spill into any openings.

Customer Service

For additional help, contact Betron customer service.

Visit: www.betron.co.uk

Limited Warranty

Your speaker is covered by a limited warranty. Visit our website at www.betron.co.uk for details of the limited warranty.

To register your product, visit www.betron.co.uk for instructions. Failure to register will not affect your limited warranty rights.

Technical information

Model No: A3

Bluetooth Version: V4.2+EDR

Loudspeaker: 40mm

Output: 3W

Power Input: DC5V 1000mA

Built-in Battery: Li-ion 3.7V , 500 mAh

Care and Maintenance

Customer Service

If you experience problems with your Bluetooth® speaker:

- Check the battery charge your speaker if necessary.
- Make sure all cables are securely attached.
- Place your speaker according to placement guidelines (see page 10).
- Make sure your mobile device supports Bluetooth.

If you could not resolve your issue, see the table below to identify symptoms and solutions to common problems. If you are unable to resolve your issue, contact Betron customer service.

Problem	What to do
Battery won't charge	<ul style="list-style-type: none">• Battery may be in protection mode or discharged. Plug the USB charging cable into a USB wall charger or computer that is powered on.
No Power (Battery)	<ul style="list-style-type: none">• Connect the USB charging cable to a different USB port.• Use a different USB cable.• Use a different wall charger.• Connect to a different AC (mains) power source.
Speaker won't pair with mobile device	<ul style="list-style-type: none">• On your mobile device, turn the Bluetooth® feature off and then on. Remove your speaker from the Bluetooth list on your mobile device. Pair your mobile device again.• Pair a different device.• Reset your speaker.
No sound	<ul style="list-style-type: none">• Unlock your device and turn on the Bluetooth.• Use Bluetooth to pair your device.

Care and Maintenance

Problem

What to do

No sound from a cabled mobile device

- Power on the mobile device and play music.
- Increase the volume on your speaker and mobile device.
- Press and release until the Input indicator glows white.
- Use a different AUX cable.
- Increase the volume on the mobile device.
- Connect a different mobile device.

Poor sound quality

- Use a different music source.
- Pair a different mobile device.
- Disconnect the second device.
- Increase the volume on your mobile device and music source.

Poor sound quality from a cabled mobile device

- Increase the volume on your speaker and mobile device.
- Use a different AUX cable.
- Connect a different mobile device.

betron

www.betron.co.uk